BABY LOCK IQ DESIGNER ICON REFERENCE CHART

The key images in this document are from the Baby Lock IQ Designer. The icons on your machine may be in a different place but the images in those icons are consistent from one machine to another. Some machines will not have all the functions available so, some of these icons may not appear on the machine you are using.

	START	IQ D	ESIGNER			
	Start IQ Designer h or pressing the IQ screen.	by press Design	sing the IQ Designer er key 🗖 in the	key 🚾 in the home page screen embroidery pattern selection		
	PATTERN DR	AWIN	G SCREEN KEY	S		
All Clear	All Clear key Touch this key to clear all the lines and shapes and start from the beginning. The background image is also cleared.		Cancel	Cancel Key Touch this key to exit from the IQ Designer. All lines and shapes are erased when you touch this key.		
	Brush Tool Key Paint with brush and set color. Select the brush type, fill type and color as needed. Painted lines and areas will be converted to pattern embroidered design with fill stitch. Touch the		\bigotimes	<u>Cut Key</u> Touch this key to cut out the selected section. (See page 13 of Destiny II Instruction and Reference Guide Addendum)		
	color from a region within the pattern drawing area. The picked- up color is shown as the currently selected region color beside the button and as the selected color in the Region Property screen. (See page 10 of Destiny II	<	8	Duplicate Key Touch this key to duplicate the selected section. The temporarily positioned section can immediately be rotated, enlarged, reduced or moved.		
	Instruction and Reference Guide Addendum) Brush Shape – Square Used to paint regions. Ends of strokes are square. Brush Shape – Round	Ма	Ла	Ма		<u>Erase Key</u> Touch to erase lines and shapes that have been drawn. Select the size and shape of the eraser. (See page 12 of Destiny II Instruction and Reference Guide Addendum)
	Used to paint regions. Ends of strokes are rounded. Brush Size – Small Paints a thin line. Choose either			Fill Properties – Set Touch to set the Region fill stitch types and colors.		
	a square or round brush. Brush Size – Medium Paints a medium size line. Choose either a square or round brush			Fill Stitch Type – Fill Stitch Pattern Region will be filled with Fill Stitching.		
	Brush Size – Large Paints a heavy line. Choose either a square or round brush.		24200	Fill Stitch Type – Stippling Pattern Region will be filled with Stipple Stitching.		

PATTERN DRAWING SCREEN KEYS CONT.

	Fill Stitch Type – Decorative Fill Patterns			Line Tool Key Draw lines and set the color. You
******	Region will be filled with select decorative fill patterns. Displays			can select the line type, stitch type and color. Touch the
	Touch the Select key select to select a pattern.			eyedropper key to pick up the color from a line in the pattern within the pattern drawing area
		F		The picked-up color is shown as
<u>M</u> MM	Used when a region with no fill stitching is desired.	Υ		beside the button and as the selected color in the Line Property screen. (See page 8 of
	Illustration Design Key Touch to scan color illustrations using the built-in camera. The			Destiny II Instruction and Reference Guide Addendum)
	image is placed on the page and			Line Properties - Set
🙀 Create Fill Image	the image to embroidery data. You can also import the	1		Touch 🖳 to set the line types, stitch types and colors.
	computer or SD card and create the embroidery design. (See		R	Line- Freehand Line Freehand line with an open end.
	and Reference Guide Addendum)			Line – Freehand Line Freehand line which automatically closes the end.
	Touch to scan the attached frame and display the image on the screen as the background while using the IQ Designer. You can	XX		Line – Straight Line Creates a straight line with one stroke.
	background or scan the picture as the reference when creating the pattern.			Line – Point to Point Straight Line Place points and straight lines are created connecting the
52 Court Line Incom	Line Design Key Touch to scan the line drawing using the built-in camera. The line drawing is placed on the		5	direction as it travels from point to point. If the end point is placed near the start point a closed line will be created.
	page and is then used to edit and convert the line drawing to embroidery data. You can also	0		Line Stitch Type – Zig Zag Creates a zig zag stitch.
	from USB media, computer or SD			Line Stitch Type – Running Stitch
	card and create the embroiderv design. (See page 22 of Destiny Il Instruction and Reference			Creates a straight stitch (running stitch)
				Line Stitch Type – Triple Stitch Creates a triple stitch.
			***	Line Stitch Type – Candlewicking Stitch Creates Candlewicking stitches.
Continued or and			~~~	Line Stitch Type – Chain Stitches Creates chain stitches.
continued on next pa				

PATTERN DRAWING SCREEN KEYS CONT.

	Line Stitch Type – No Stitches Creates a line with no stitching. Lines with no stitching are used	+		Stamp Shapes – Basic Shapes Select basic geometric shapes.
M.M.	to create a region for fill stitching. The created region will be defined by a gray line which will not be stitched.			Stamp Shapes – Closed Shapes Select closed shapes.
	Magnify Key Zoom in or out when viewing the		6	Stamp Shapes – Open Shapes Select open shapes.
	pattern. Zoom range 100%-800% (See p.10 of Destiny II Instruction and Reference Guide Addendum)			Stamp Types – Outline Stitch the outline of a Basic Shape.
Next	Next Key Touch this key to continue to the stitch settings screen.			Stamp Types – Fill Stitch Stitch a fill stitch inside a Basic Shape.
	Paste Key Touch this key to paste a selected section duplicated with the Duplicate key or a selected section using the Cut key.			Stamp Types – Outline and Fill Stitch Stitch both a fill stitch inside and an outline around a Basic Shape.
	<u>Recall Key</u> Touch this key to recall image data created with IQ Designer from the machine's memory, USB media, SD card or the computer.			Stamp – Saved Outlines Embroidery pattern outlines can be registered as stamp shapes. When registering stamp shapes, select from the last six embroidery patterns used. If more than six shapes are
Rotate	Rotate Key Touch this key to rotate the selected section. (See page 13 of Destiny II Instruction and Reference Guide Addendum)			registered, the oldest one is automatically erased. For details, refer to Embellishing around a pattern in embroidery. (See page 38 of Destiny II Instruction and Reference Guide Addendum)
	Touch this key to select a section for moving by finger or pen, copying, deleting, changing size and rotating lines and shapes that have been drawn.(See page 13 of Destiny II Instruction and Reference Guide Addendum)			Stamp – Frame Embroidering Areas Use to select an embroidering area in order to arrange the pattern to fit an embroidery frame. Store Key
0	Size Key Touch this key to change the size			Touch this key to save the pattern being created to memory.
Size	page 13 of Destiny II Instruction and Reference Guide Addendum)		F	<u>Undo Key</u> Touch this key to undo the last operation that was performed and return to the previous state. Each
Ð	Stamp Key Touch this key to select the stamp shape for pattern drawing. (See page 11 of Destiny II Instruction and Reference Guide Addendum)			Touch of this key will undo one operation.

STITCH SETTINGS SCREEN

	Decorative Fill Stitch Settings -			Preview
	Direction			Touch Preview to create the
Direction	Sets the angle of rotation for the		Preview	embroidery pattern and proceed
	pattern.	-		to the Embroidery Image Preview
	Decorative Fill Stitch Settings -			Screen.
	Outline			
	The outline will be converted to			Stippling Stitch Settings -
	embroidery data whether "ON" or			Distance
Outline	"OFF" is selected If "ON" is	γ	Distance	Sets the offset from the pattern
	selected the number of thread	1-1		outline
	jumps can be reduced.			
	Decorative Fill Stitch Settings –			Stippling Stitch Settings - Run
	Size			Pitch
Size	Increases or decreases the size		∠∑ Run pitch	Sets the stitch length of the
с. Н	of the pattern		V	stitches in the stinnle nattern
	Fill Stitch – Density			
	Sets the stitch density of fill			Stippling Stitch Settings -
Density	stitches	1		Spacing
	Fill Stitch – Direction	4	NG Creating	Sets the amount of space
	Sets the sewing direction Select		Ses Spacing	between the lines of stitching in
Direction	"Manual" to change fill stitches to			the stipple pattern
	the desired direction.			
	Fill Stitch – Pull Compensation			
	Sets pull compensation to			
	compensate for the shrinkage of			
100				
Pull	the pattern by slightly shortening		EMBROIDERY	IMAGE PREVIEW SCREEN
Pull compensation	the pattern by slightly shortening or lengthening the stitching.	X	EMBROIDERY	IMAGE PREVIEW SCREEN
Pull compensation	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed	X	EMBROIDERY	IMAGE PREVIEW SCREEN
Pull compensation	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern.		EMBROIDERY	IMAGE PREVIEW SCREEN
Pull compensation	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing	X	EMBROIDERY	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame
Pull compensation	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. <u>Fill Stitch – Under Sewing</u> Sets or removes under stitching			IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame
Pull compensation	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area.		EMBROIDERY	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Peturn
Pull compensation	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area.			IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch
Pull compensation Under sewing	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. <u>Fill Stitch – Under Sewing</u> Sets or removes under stitching from the selected area. <u>Line Sew – Candlewicking Size</u>		EMBROIDERY	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen
Pull compensation Under sewing	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size		EMBROIDERY	IMAGE PREVIEW SCREENFrame PreviewTouch to check the pattern image within the embroidery frameReturnTouch to return to the Stitch Settings screen
Pull compensation Under sewing	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches.	X	EMBROIDERY	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen Save
Pull compensation Under sewing ****I Size	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches.	XX	EMBROIDERY	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen Save Touch to save the pattern as
Pull compensation Under sewing ****I Size	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches.		EMBROIDERY Return	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen Save Touch to save the pattern as embroidery data
Pull compensation Under sewing ****I Size	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches.		EMBROIDERY Return	IMAGE PREVIEW SCREENFrame PreviewTouch to check the pattern imagewithin the embroidery frameReturnTouch to return to the StitchSettings screenSaveTouch to save the pattern asembroidery data
Pull compensation Under sewing ****I Size	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches.		EMBROIDERY Return	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen Save Touch to save the pattern as embroidery data
Pull compensation Under sewing **** Size •= Repetition	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches.		EMBROIDERY Return	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen Save Touch to save the pattern as embroidery data Set Touch to proceed to the
Pull compensation Under sewing ****I Size •==-• Repetition	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches.		EMBROIDERY Return	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen Save Touch to save the pattern as embroidery data Set Touch to proceed to the Embroidery Edit screen
Pull compensation Under sewing **** Size •==- Repetition	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches. Line Sew – Repetition Sets repeated sewing at the same part. Run Pitch Sets the stitch length of a running		EMBROIDERY Return	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen Save Touch to save the pattern as embroidery data Set Touch to proceed to the Embroidery Edit screen.
Pull compensation Under sewing **** Size • Repetition Run pitch	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches. Line Sew – Repetition Sets repeated sewing at the same part. Run Pitch Sets the stitch length of a running stitch or triple stitch.		EMBROIDERY Return Sca	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen Save Touch to save the pattern as embroidery data Set Touch to proceed to the Embroidery Edit screen.
Pull compensation Under sewing **** Size •== Repetition Run pitch	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches. Line Sew – Repetition Sets repeated sewing at the same part. Run Pitch Sets the stitch length of a running stitch or triple stitch.		EMBROIDERY Return SGC	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen Save Touch to save the pattern as embroidery data Set Touch to proceed to the Embroidery Edit screen.
Pull compensation Under sewing **** Size •== Repetition •= Run pitch	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches. Line Sew – Repetition Sets repeated sewing at the same part. Run Pitch Sets the stitch length of a running stitch or triple stitch.		EMBROIDERY Return	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen Save Touch to save the pattern as embroidery data Set Touch to proceed to the Embroidery Edit screen.
Pull compensation Under sewing ****I Size •==- Repetition • Run pitch //// Density	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches. Line Sew – Repetition Sets repeated sewing at the same part. Run Pitch Sets the stitch length of a running stitch or triple stitch. Line Sew – Zigzag Density Sets the density (stitch length) of the sigzed stitch		EMBROIDERY Return	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen Save Touch to save the pattern as embroidery data Set Touch to proceed to the Embroidery Edit screen.
Pull compensation Under sewing ****I Size •== Repetition • Run pitch	the pattern by slightly shortening or lengthening the stitching. Change the setting if needed after test stitching the pattern. Fill Stitch – Under Sewing Sets or removes under stitching from the selected area. Line Sew – Candlewicking Size Increases or decreases the size of Candlewicking stitches. Line Sew – Repetition Sets repeated sewing at the same part. Run Pitch Sets the stitch length of a running stitch or triple stitch. Line Sew – Zigzag Density Sets the density (stitch length) of the zigzag stitch.		EMBROIDERY Return SG3	IMAGE PREVIEW SCREEN Frame Preview Touch to check the pattern image within the embroidery frame Return Touch to return to the Stitch Settings screen Save Touch to save the pattern as embroidery data Set Touch to proceed to the Embroidery Edit screen.

