


Instructions for attaching the side leaf. (Quilter's Petite model)

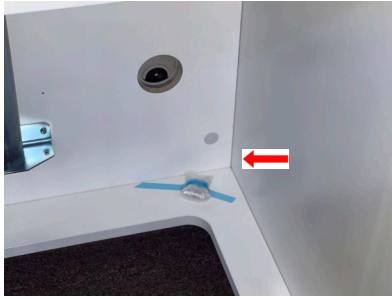

1) Locate the hardware package at the base of the cabinet.

The contents include:

2 mounting bolts

2 cam-locks

2 cam-lock cover stickers. Use these to cover the cam-locks only if you don't plan to remove the side leaf for storage.




2) Remove the top cover.



3) Attached the mounting bolts in the pre-drilled holes located on the back side of the top cover.



4) Insert 2 cam-locks into the folding door, one in each hole, with the arrow pointing to the top of the door.

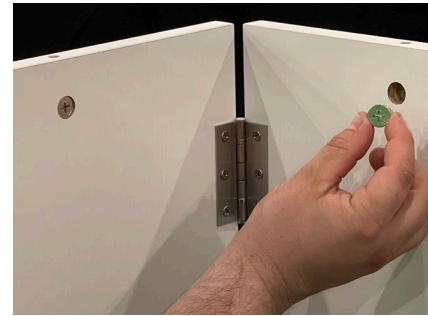

5) Position the folding door so that the mounting bolts in the top cover, align with the holes that lead to the cam-locks. The top cover should fit against the side of the cabinet when you have the door swung all the way to the left. If it does allow for this, then flip the top cover in the opposite direction and try again.

6) Once it's aligned, turn the cam-lock clockwise until snug. Do not over-tighten.

SewFine Cabinet lift instructions and adjustment

SewFine cabinets are equipped with a pneumatic lift that positions your sewing machine in 3 positions.

- 1) Storage (lowest position)
- 2) Sewing (the machine is level with the top surface of the cabinet)
- 3) Open-arm or embroidery position (the machine is at its highest position)



Machine lift operation



To change the lift position please place both hands on the top of the sewing machine, pushing straight down move the machine and lift in a downward motion until you hear the locking mechanism disengage. Once this happens you can either allow the lift to move the machine to the higher position or if you are lowering the machine, continue to apply pressure until the machine platform engages and locks into the next position. **Warning!** Do not attempt to move the platform without a machine positioned on it. This platform requires the weight of a sewing machine to counter act its force. Failure to do so can result in injury.

The sewing position height is adjustable to accommodate multiple brands and models of sewing machines. The proper height id for the machine surface to be slightly higher than the cabinet top. Shown here with an optional insert that fits around the machine, giving a flat sewing surface.

To adjust this height, locate the two adjustment screws located on the stopping block of the lift mechanism.

Loosen these two screws and either raise or lower this block to adjust the stopping position of the lift for sewing model. A measurement guide is provided for reference.

